



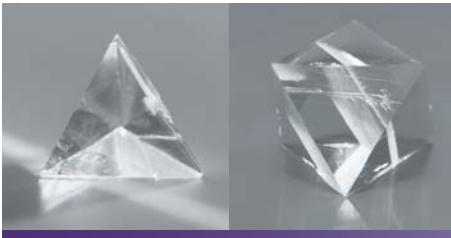

Calcium Fluoride  
VUV/DUV/UV, VIS and IR applications



## Lithotec Calcium Fluoride Micro-lithography technologies

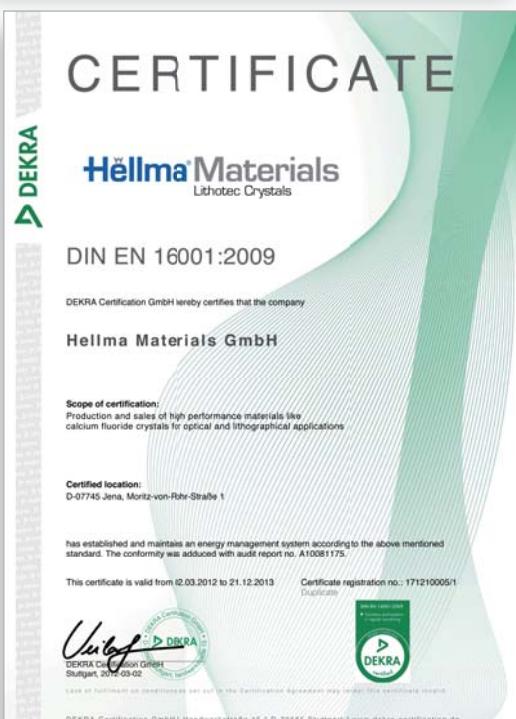

Calcium fluoride single crystals, grown from high purity raw materials, are required for illumination and projection optics in 248 and 193 nm micro-lithography technologies.

Hellma Materials' expertise allows fabrication of  $\text{CaF}_2$  blanks in diameters up to 440 mm and with a thickness exceeding 100 mm and highest transmission down to 157 nm.

### Key quality features are:

- Excellent UV transmittance
- High laser durability
- Low stress birefringence
- High refractive index homogeneity

The very high laser durability of  $\text{CaF}_2$  makes it the first choice material for litho excimer laser optics, beam deliveries, and for all excimer wavelengths in a wide range of other applications.

Synthetic calcium fluoride crystals complete the application range of optical materials from VUV to IR with a very good transmission ranging from 130 nm to 9  $\mu\text{m}$ . Advantages in optical performance can be achieved with calcium fluoride in chromatically corrected optical systems in astronomy, photography, HDTV zoom lenses, as well as in microscopy. Further applications are sensors (especially in IR spectrum), spectrometers and medical lasers.

Hellma Materials offers  $\text{CaF}_2$  components and blanks with different crystal orientations ( $<111>$ ,  $<100>$ , random or others on request) along with different surface qualities (raw, cut, ground or polished), depending on the individual requirements.

## Fields of Application

### IC Litho: Manufacturing tools

Typical dimensions	up to 350 mm diameter, 80 mm thickness		
Wavelength	248 nm	193 nm	157 nm
Internal transmittance per 10 mm sample thickness [%]	> 99.8	> 99.7	> 99.4
Refractive index homogeneity PV @ 633 nm [ppm]	1 - 15 (depending on diameter)		
Stress birefringence PV @ 633 nm [nm/cm] *	1 - 20		
Bubbles, inclusions (ISO 10110-3)	1/1 x 0.063 (typical)		



### IC Litho: Excimer laser & beam delivery systems


Typical dimensions	disks: up to 100 mm diameter / 30 mm thickness prisms: up to 100 mm edge length		
Characteristic parameters	See table above: Litho manufacturing tools		
Laser durability	Hellma Materials offers material with a laser durability up to highest requirements which is categorized by an internal classification method. In addition to volume characteristics, laser durability is also dependent on surface quality (with increasing laser energies) and on the laser operating conditions.		
Laser durability classification	LD-A: Superior      LD-B: High LD-C: Advanced      LD-D: Standard		
A qualified long-term laser durability is provided by each of these classes adapted to the individual application requirements. Please define application wavelength, energy density, repetition rate, pulse length and pulse number.			
Laser damage threshold @ 193 nm	~7 J/cm <sup>2</sup> (effects: surface defects, ablation)		



### Non-Litho: Laser & imaging optics

Typical dimensions	100 mm diameter, 30 mm thickness		
Max. dimensions	up to 440 mm diameter, 80 mm thickness		
Available grades	UV grade: 193 – 400 nm VIS grade: 400 – 780 nm IR grade: 0.78 – 9.00 µm		
Internal transmittance per 10 mm sample thickness [%]	> 99.0		
Refractive index homogeneity PV @ 633 nm [ppm]	3 - 20		
Stress birefringence PV @ 633 nm [nm/cm] *	1 - 50		
Bubbles, inclusions (ISO 10110-3)	1/1 x 0.10 (typical)		

For other specifications and individual requirements regarding dimensions, material and surface quality please contact our sales department.

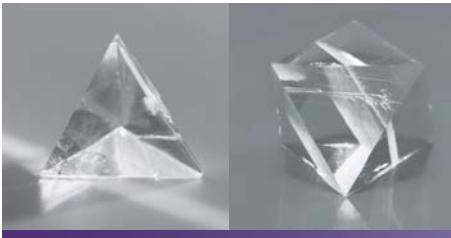

## Properties of Calcium Fluoride Optical properties

Refractive indices n(N <sub>2</sub> ) (at 22 °C, nitrogen atmosphere, 1013 hPa)			Variation over temperature
	λ <sub>vac</sub> [nm]	n	Δn/ΔT (N <sub>2</sub> )[1x10 <sup>-6</sup> /K]
n <sub>2325</sub>	2325.59	1.42212	-
n <sub>1970</sub>	1970.56	1.42401	-
n <sub>1530</sub>	1530.00	1.42612	-
n <sub>1060</sub>	1060.00	1.42851	-
n <sub>t</sub>	1014.25	1.42879	-9.6
n <sub>s</sub>	852.35	1.43002	-9.7
n <sub>r</sub>	706.71	1.43166	-9.7
n <sub>c</sub>	656.45	1.43245	-9.8
n <sub>C'</sub>	644.03	1.43267	-9.8
n <sub>He-Ne</sub>	632.98	1.43288	-9.8
n <sub>D</sub>	589.46	1.43380	-9.8
n <sub>d</sub>	587.73	1.43384	-9.8
n <sub>e</sub>	546.23	1.43493	-9.8
n <sub>F</sub>	486.27	1.43701	-9.8
n <sub>F'</sub>	480.13	1.43726	-9.8
n <sub>g</sub>	435.96	1.43946	-9.7
n <sub>h</sub>	404.77	1.44148	-9.6
n <sub>i</sub>	365.12	1.44488	-9.4
n <sub>334</sub>	334.24	1.44848	-9.1
n <sub>312</sub>	312.66	1.45173	-8.8
n <sub>296</sub>	296.82	1.45463	-8.5
n <sub>280</sub>	280.43	1.45824	-8.1
n <sub>248</sub>	248.35	1.46791	-6.9
n <sub>194</sub>	194.23	1.50060	-3.2
n <sub>193</sub>	193.37	1.50143	-3.2
n <sub>184</sub>	184.95	1.51055	-2.5
n <sub>157**</sub>	157.63	1.55927	

λ<sub>vac</sub> = vacuum wavelength

Tolerances of refractive indices: ± 2 x 10<sup>-5</sup>

\*\* Measurement at NIST on 08-01-00. All refractive indices are interpolated from values measured under dry Nitrogen.

$$\begin{aligned}n_d &= 1.43384 \\n_e &= 1.43493 \\v_d &= 95.23 (+/- 0.2 \%) \\v_e &= 94.69 (+/- 0.2 \%) \\n_F - n_C &= 0.00456 \\n_F' - n_C' &= 0.00459\end{aligned}$$

Relative partial dispersion		Deviation of relative partial dispersions from "Normal Line"
P <sub>s,t</sub>	0.2698	ΔP <sub>C,t</sub> -0.1935
P <sub>C,s</sub>	0.5333	ΔP <sub>C,s</sub> -0.0915
P <sub>d,C</sub>	0.3046	ΔP <sub>F,e</sub> 0.0183
P <sub>e,d</sub>	0.2388	ΔP <sub>g,F</sub> 0.0552
P <sub>g,F</sub>	0.5389	ΔP <sub>i,h</sub> 0.2636
P <sub>i,h</sub>	0.7462	

Sellmeier dispersion formula for refractive indices (λ [μm])

$$n^2 - 1 = B_1 \lambda^2 / (\lambda^2 - C_1) + B_2 \lambda^2 / (\lambda^2 - C_2) + B_3 \lambda^2 / (\lambda^2 - C_3)$$

Constants of Sellmeier dispersion formula for λ and n (N<sub>2</sub>)

B <sub>1</sub>	6.188140 x 10 <sup>-1</sup>	C <sub>1</sub>	2.759866 x 10 <sup>-3</sup>
B <sub>2</sub>	4.198937 x 10 <sup>-1</sup>	C <sub>2</sub>	1.061251 x 10 <sup>-2</sup>
B <sub>3</sub>	3.426299	C <sub>3</sub>	1.068123 x 10 <sup>3</sup>

valid for 184 nm < λ < 2326 nm (22 °C; 1013 hPa); n = n(N<sub>2</sub>); λ<sub>λ</sub> = λ<sub>vac</sub>

Refractive index variation over temperature change

$$\Delta n / \Delta T (18 - 28 °C) = t_0 + t_1 \cdot \lambda^{-2} + t_2 \cdot \lambda^{-4} + t_3 \cdot \lambda^{-6}$$

Constants of formula for Δn/ΔT in Nitrogen		Constants of formula for Δn <sub>abs</sub> / ΔT in vacuum	
t <sub>0</sub>	-9.5 x 10 <sup>-0</sup>	D <sub>0</sub>	-3.18 x 10 <sup>-5</sup>
t <sub>1</sub>	-1.8 x 10 <sup>-1</sup>	D <sub>1</sub>	-2.31 x 10 <sup>-8</sup>
t <sub>2</sub>	2.9 x 10 <sup>-2</sup>	D <sub>2</sub>	4.13 x 10 <sup>-11</sup>
t <sub>3</sub>	-5.0 x 10 <sup>-4</sup>	E <sub>0</sub>	3.35 x 10 <sup>-7</sup>
-	-	E <sub>1</sub>	1.91 x 10 <sup>-10</sup>
-	-	λ <sub>TK</sub> [μm]	0.192

valid for 184 nm < λ < 1014 nm

and for +18 °C ≤ T ≤ +28 °C

valid for 365 nm < λ < 1060 nm

and for -100 °C ≤ T ≤ +140 °C

Differential temperature coefficients of the refractive index

[nm]	Δn <sub>rel</sub> / ΔT [10 <sup>-6</sup> /K]*		Δn <sub>abs</sub> / ΔT [10 <sup>-6</sup> /K]**		
wavelength	1060.0	546.23	365.12	1060.0	546.23
-40/-20 [°C]	-8.6	-8.3	-7.7	-10.5	-10.3
+20/+40 [°C]	-10.4	-10.1	-9.5	-11.6	-11.4
+60/+80 [°C]	-11.2	-11.0	-10.3	-12.2	-12.0
				-11.3	

valid for 365 nm < λ < 1060 nm and for -100 °C ≤ T ≤ +140 °C

\* relative to nitrogen \*\* relative to vacuum

## Properties of Calcium Fluoride

### Additional properties

Chemical / electrical properties	
Solubility in water [g/l] 20 °C	0.016
Crystal type	single crystal, synthetic
Crystal structure	cubic; CaF <sub>2</sub> type structure
Cleavage planes	(111)
Lattice constant [nm]	0.546342

Thermal properties	
Melting point [°C]	1420
Mean specific heat $C_p$ (20 °–100 °C) [J/(kg · K)]	854
Heat conductivity $\lambda$ (20 °C) [W/(m · K)]	9.71
Linear thermal expansion coefficient	
$\alpha$ (20/300 °C) [10 <sup>-6</sup> /K]	21.28
$\alpha$ (-30/70 °C) [10 <sup>-6</sup> /K]	18.41
$\alpha$ (0/25 °C) [10 <sup>-6</sup> /K]	18.50

Chemical behavior of polished surfaces		
Climatic resistance class (ISO/WD 13384)	CR	1
Acid resistance class (ISO 8424)	SR	4.5
Alkali resistance class (ISO 10629)	AR	2.3
Phosphate resistance class (ISO 9689)	PR	1.3
Stain resistance class	FR	0

Mechanical properties	
Young's Modulus E (25°C) [GPa]	75.8
Shear Modulus (25°C) [GPa]	33.77
Compressive Modulus K [GPa]	83.8
Poisson's Ratio $\mu$	0.26
Knoop Hardness (ISO 9385) HK	158.3
Mohs Hardness	4.0
Density $\rho$ [g/cm <sup>3</sup> ]	3.18
Grindability (ISO 12844) HG	6




Stress-optical coefficients ( $q_{11}$ – $q_{12}$ ) and  $q_{44}$  measured at NIST\*\*

$\lambda$ (nm)	CaF <sub>2</sub>	
	$q_{11}$ – $q_{12}$ (10 <sup>-12</sup> Pa <sup>-1</sup> )	$q_{44}$ (10 <sup>-12</sup> Pa <sup>-1</sup> )
637.8*	-1.46 ± 0.01	0.71 ± 0.01
546.4	-1.53 ± 0.02	0.75 ± 0.01
436.0	-1.55 ± 0.02	0.74 ± 0.01
365.1	-1.57 ± 0.02	0.74 ± 0.01
253.7	-1.66 ± 0.02	0.73 ± 0.01
193.1	-1.77 ± 0.02	0.66 ± 0.01
156.1	-1.91 ± 0.05	0.45 ± 0.01
157.63 (linear int.)	-1.90	0.46



\* all values related to (111) direction

\*\* Lit. 2

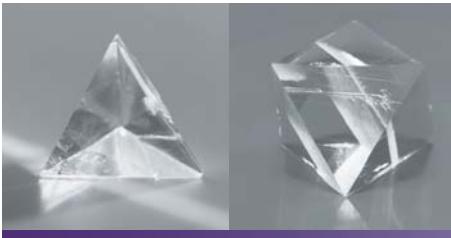

## Spectral Transmission


The very broad spectral transmission range of calcium fluoride from 130 nm to 9  $\mu\text{m}$  (depending on sample thickness) makes it suitable for various applications in the ultraviolet, visible and infrared spectrum.

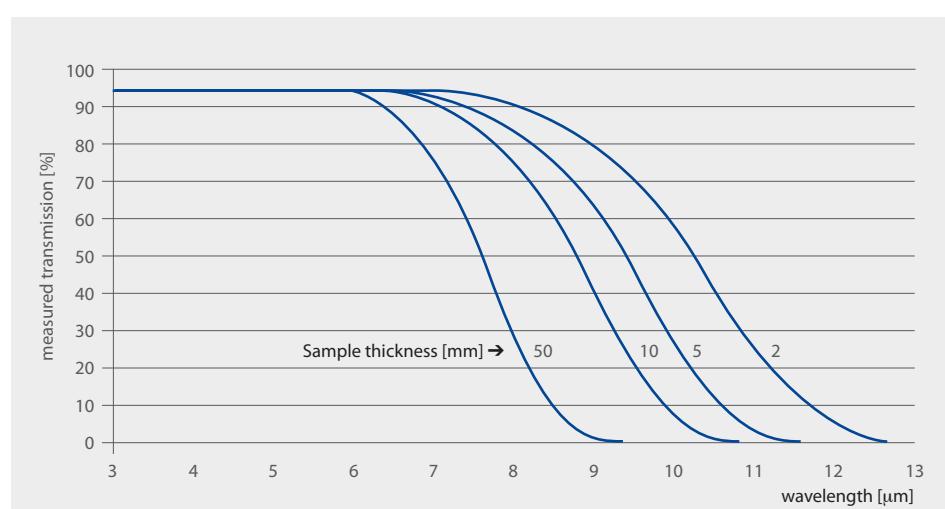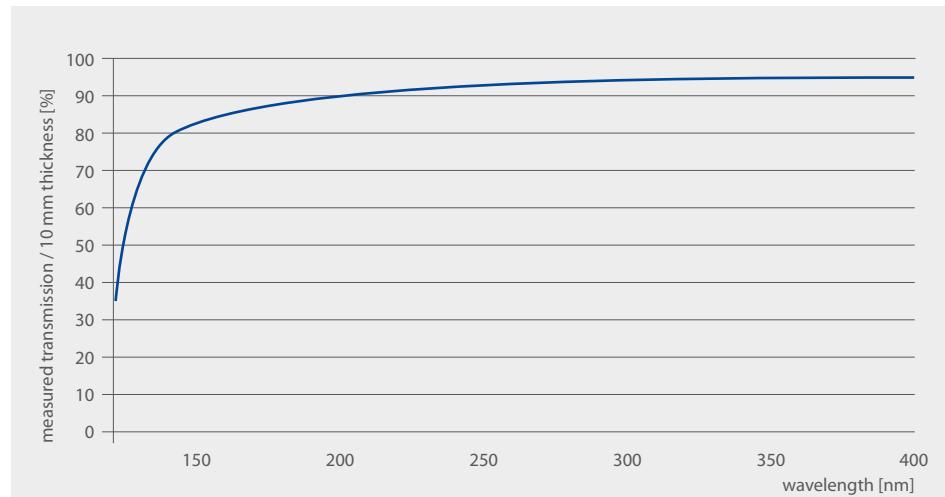

Typical transmission characteristics may vary in dependence from crystal properties



## Abbe Diagram

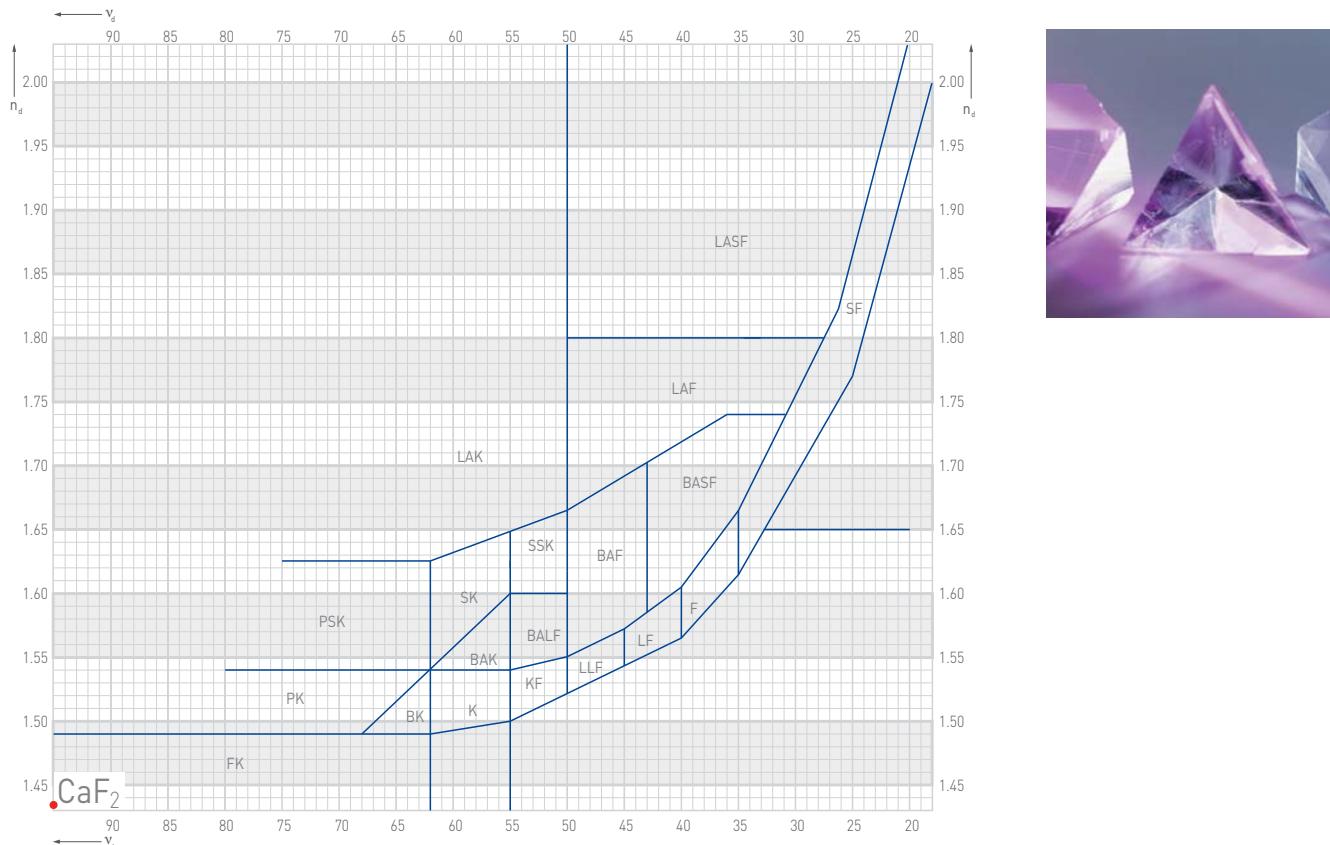

[www.hellma-materials.com](http://www.hellma-materials.com)

## List of Literature Alphabetical

1. H. Bach, N. Neuroth, "The Properties of Optical Glass", Springer, Berlin, 1995
2. J. H. Burnett, "Stress-optical coefficients of 157 nm materials", Sematech 157 nm Tech. Data Rev., Maryland, 2001
3. K. Knapp, E. Mörsen, "CaF<sub>2</sub> for 157 nm Lithography", Sematech 157 nm Tech. Data Rev., Orlando, 2001
4. M. Letz, A. Engel, W. Mannstadt, L. Parthier, U. Natura, K. Knapp, "CaF<sub>2</sub> for DUV lens fabrication: Basic material properties and dynamic light-matter interaction", SPIE Microlithography, Santa Clara, 2004
5. Ch. Mühlig, W. Triebel, G. Töpfer, A. Jordanov, "Calcium fluoride for ArF laser lithography – characterization by in situ transmission and LiF measurements", SPIE Damage Symposium, Boulder, 2002
6. L. Parthier, G. Grabosch, U. Natura, M. Letz, K. Knapp, "ArF Immersion Lithography – a new challenge for CaF<sub>2</sub> quality", SPIE Microlithography, Santa Clara, 2005
7. L. Parthier, Ch. Poetsch, K. Pöhl, J. Stäblein, G. Wehrhan, "Influence of lattice defects on optical homogeneity of calcium fluoride single crystals produced for high performance microlithography", presentation on DGKK, Jena, 2004 – available on request
8. K. Pöhl, L. Parthier, G. Wehrhan, J. Stäblein, "Status of the material quality of calcium fluoride single crystals produced for high performance microlithography", presentation on DUV/VUV research group meeting, Jena, 2006 – available on request

## Germany

Hellma Materials GmbH  
Moritz-von-Rohr-Straße 1  
07745 Jena / Germany  
phone + 49 3641 2877-0  
fax + 49 3641 2877-200  
[info.materials@hellma.com](mailto:info.materials@hellma.com)  
[www.hellma-materials.com](http://www.hellma-materials.com)

## For inquiries please contact our local Sales Representative

### North America

Ms Dawn Jennings  
Silicon Sense, Inc.  
phone + 1 603 891 4248  
fax + 1 603 891 4264  
mobile + 1 603 566 8687  
[dawn@siliconsense.com](mailto:dawn@siliconsense.com)

## For inquiries please contact our local Distributor

### China

Ms Judy Lim  
Hellma China Pte Ltd  
phone + 65 6896 8603  
fax + 65 6896 6750  
[sales@hellma-china.com](mailto:sales@hellma-china.com)

### Japan

Mr Joe Nakane  
Optopia Co, Ltd  
phone + 81 44 812 5911  
fax + 81 44 812 5921  
mobile + 81 90 6045 5800  
[joenakane@optopia.co.jp](mailto:joenakane@optopia.co.jp)

### Israel

Mr Coby Cohen  
Shoshic Technologies Ltd.  
phone + 972 77 9100 875  
fax + 972 77 9100 875  
mobile + 972 544 399 862  
[coby@stech.co.il](mailto:coby@stech.co.il)

### United Kingdom

Mr Paul Bailey  
Hellma UK LTD  
phone + 44 1702 335 266  
fax + 44 1702 430 652  
[sales@hellma.co.uk](mailto:sales@hellma.co.uk)

### Italy

Ms Alida Donizetti  
Hellma Italia S.r.l.  
phone + 39 0226 116 419  
fax + 39 0226 113 331  
[alida@hellma.it](mailto:alida@hellma.it)